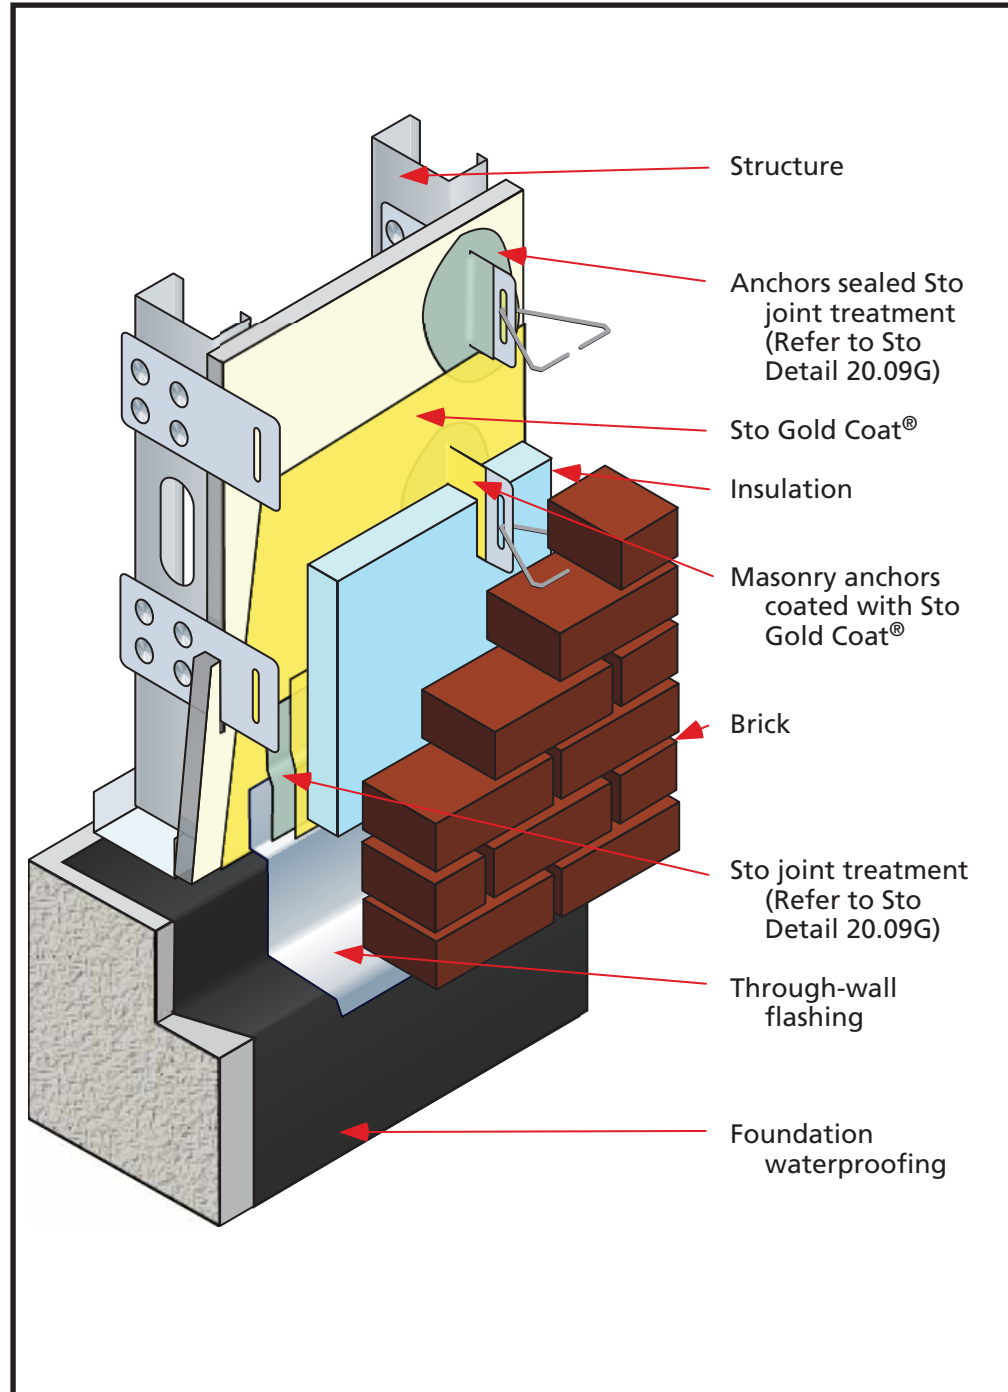


# StoGuard™ Waterproofing/Air Barrier with Sto Gold Coat® Steel Frame with Brick Veneer

Date: August 2007

**Notes:**

This installation shows masonry anchors that are fastened through the StoGuard Waterproofing/Air Barrier with Sto Gold Coat.

- 1] Install StoGuard as per Sto specifications.
- 2] Install flashing. Integrate the flashing with the StoGuard by overlapping the upper edge of flashing with Sto joint treatment and overcoat with Sto Gold Coat.
- 3] Secure masonry anchors as per manufacturer's specifications.

In colder climates provide adequate exterior insulation to maintain the dew point outbound of the sheathing in the insulation.

**ATTENTION**

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, or for other construction activities beyond Sto's control. Improper use of Sto products or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to Sto products, and to the structure of the building or its components. STO CORP. DISCLAIMS ALL WARRANTIES EXPRESS OR IMPLIED EXCEPT FOR EXPLICIT LIMITED WRITTEN WARRANTIES ISSUED TO AND ACCEPTED BY BUILDING OWNERS IN ACCORDANCE WITH STO'S WARRANTY PROGRAMS WHICH ARE SUBJECT TO CHANGE FROM TIME TO TIME. For the fullest, most current information on proper application, clean-up, mixing and other specifications and warranties, cautions and disclaimers, please refer to the Sto Corp. website, [www.stocorp.com](http://www.stocorp.com).