


Sto Coatings For Insulated Concrete Forms (ICF) Components: High Impact Resistance

Detail No.: 17.02

Date: November 2007

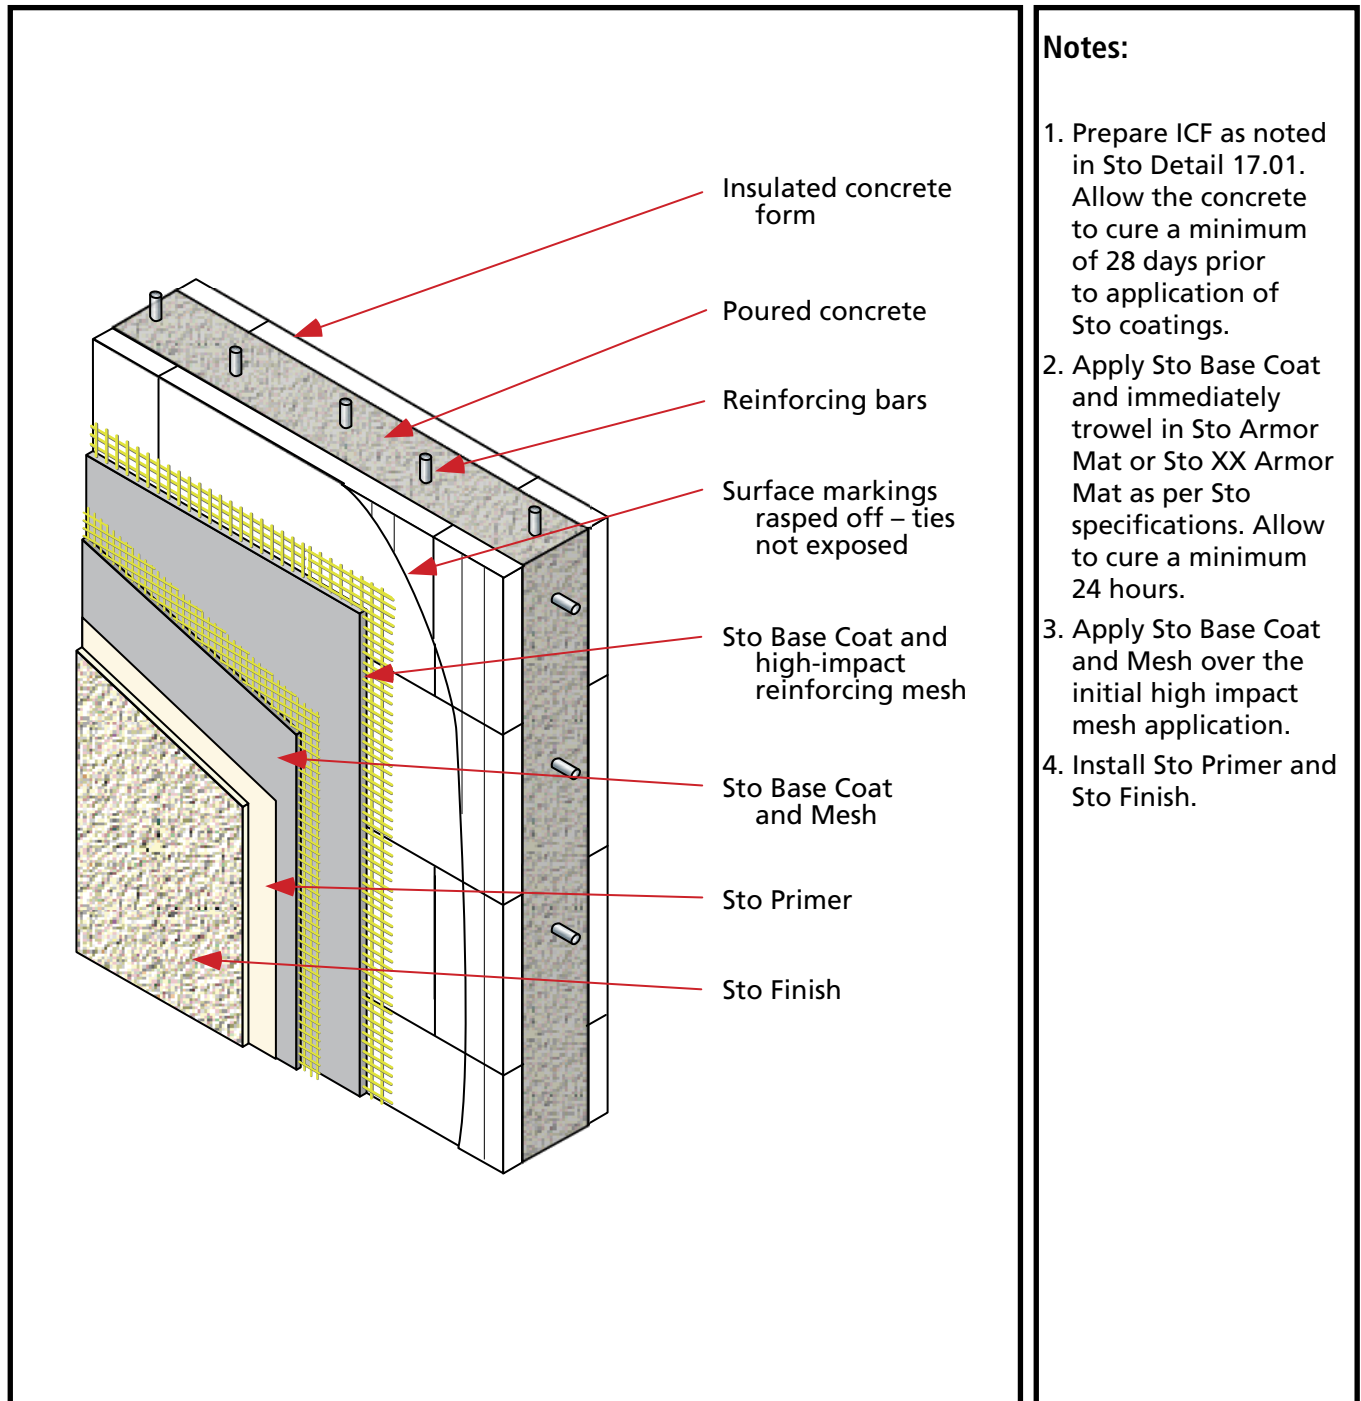

Notes:

1. Prepare ICF as noted in Sto Detail 17.01. Allow the concrete to cure a minimum of 28 days prior to application of Sto coatings.
2. Apply Sto Base Coat and immediately trowel in Sto Armor Mat or Sto XX Armor Mat as per Sto specifications. Allow to cure a minimum 24 hours.
3. Apply Sto Base Coat and Mesh over the initial high impact mesh application.
4. Install Sto Primer and Sto Finish.

ATTENTION

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, or for other construction activities beyond Sto's control. Improper use of Sto products or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to Sto products, and to the structure of the building or its components. STO CORP. DISCLAIMS ALL WARRANTIES EXPRESSED OR IMPLIED EXCEPT FOR EXPLICIT LIMITED WRITTEN WARRANTIES ISSUED TO AND ACCEPTED BY BUILDING OWNERS IN ACCORDANCE WITH STO'S WARRANTY PROGRAMS WHICH ARE SUBJECT TO CHANGE FROM TIME TO TIME. For the fullest, most current information on proper application, clean-up, mixing and other specifications and warranties, cautions and disclaimers, please refer to the Sto Corp. website, www.stocorp.com.

www.stocorp.com