


Sto Coatings For Insulated Concrete Forms (ICF) Below Grade Components

Detail No.: 17.11

Date: November 2007

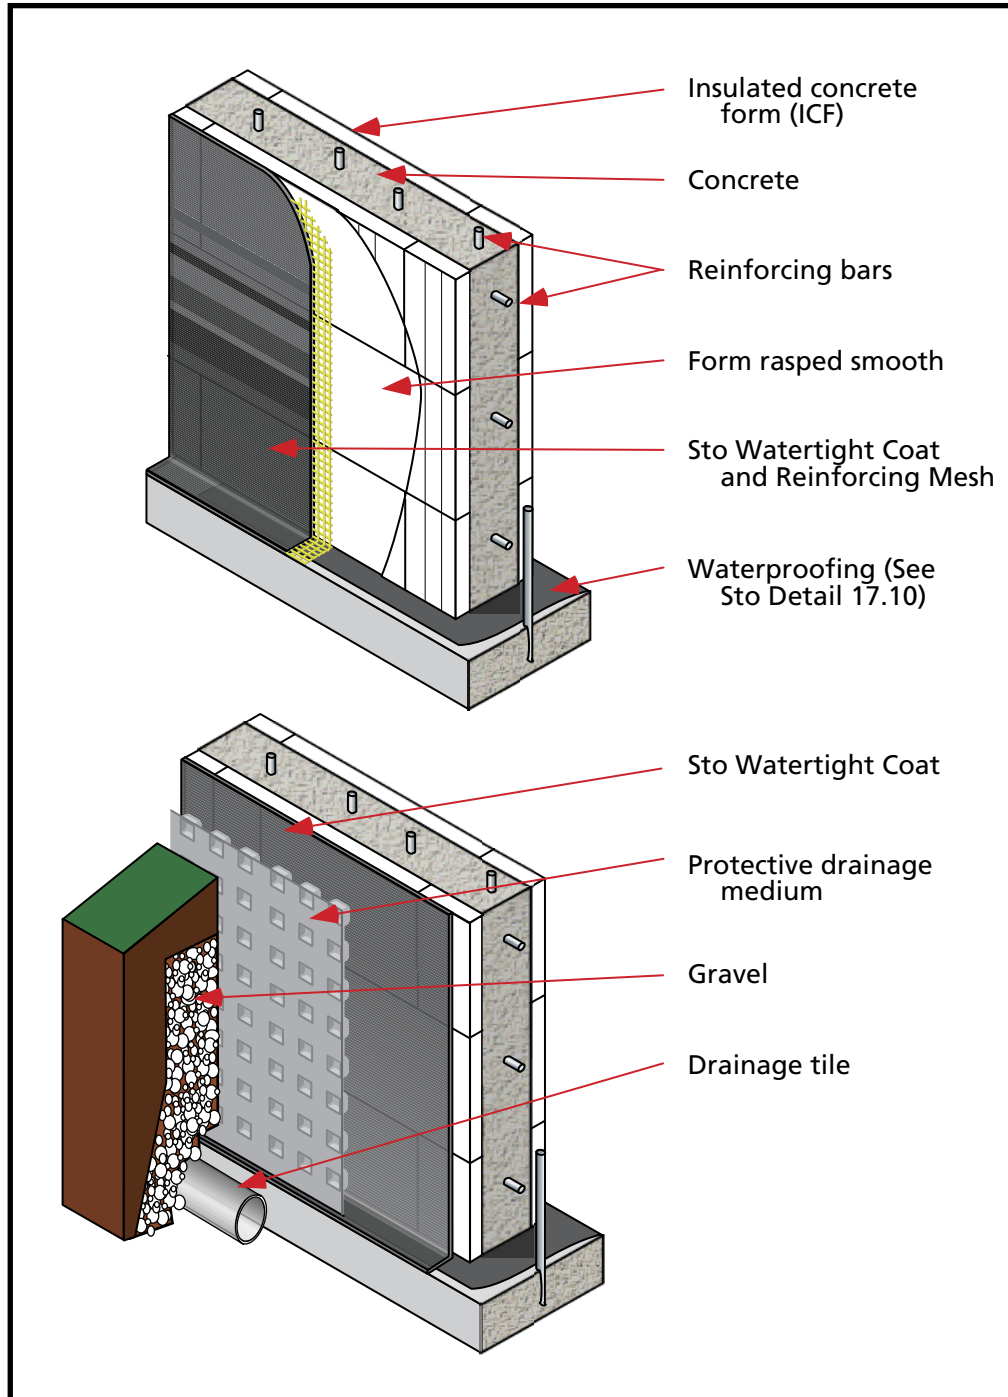

Notes:

1. Allow concrete in ICF to cure for a minimum 28 days.
2. Rasp ICF so that the surface is smooth and free of form markings.
3. Apply Sto Watertight Coat to the ICF and onto the footing. Immediately imbed Sto Reinforcing Mesh.
4. Install a protective drainage medium over the waterproofed form to allow for free drainage and to protect the ICF from back-filling damage.
5. Consult ICF manufacturer and the local code authority having jurisdiction for requirements related to control of termites and other insects.

ATTENTION

Sto products are intended for use by qualified professional contractors, not consumers, as a component of a larger construction assembly as specified by a qualified design professional, general contractor or builder. They should be installed in accordance with those specifications and Sto's instructions. Sto Corp. disclaims all, and assumes no, liability for on-site inspections, for its products applied improperly, or by unqualified persons or entities, or as part of an improperly designed or constructed building, for the nonperformance of adjacent building components or assemblies, or for other construction activities beyond Sto's control. Improper use of Sto products or use as part of an improperly designed or constructed larger assembly or building may result in serious damage to Sto products, and to the structure of the building or its components. **STO CORP. DISCLAIMS ALL WARRANTIES EXPRESSED OR IMPLIED EXCEPT FOR EXPLICIT LIMITED WRITTEN WARRANTIES ISSUED TO AND ACCEPTED BY BUILDING OWNERS IN ACCORDANCE WITH STO'S WARRANTY PROGRAMS WHICH ARE SUBJECT TO CHANGE FROM TIME TO TIME.** For the fullest, most current information on proper application, clean-up, mixing and other specifications and warranties, cautions and disclaimers, please refer to the Sto Corp. website, www.stocorp.com.

www.stocorp.com